



Mx-Series Spares Catalogue

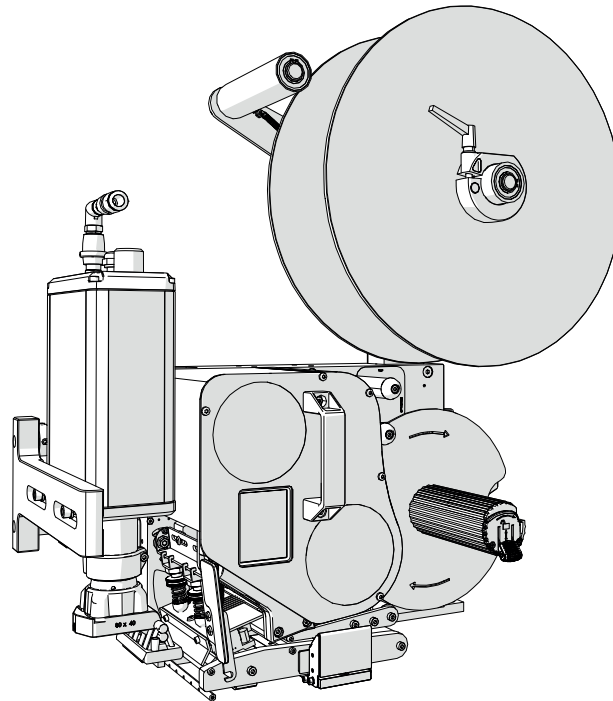
B Applicator

Contents

Introduction	2
Spares Levels	3
Preventive maintenance	3
Overview	4
Applicator module	6
Blow pad	10
Applicator Holder.....	11
Assisting blow	12
Cables	12
Adjustable beak kit.....	13
Air preparation kit.....	14

Introduction

This document provides a listing of all spare parts that can be ordered for maintenance or repair of your B applicator.



The illustration shows a 4" right version of the B applicator mounted to a printer. Most parts are identical for the 6" version and for the left version, and whenever there is a difference this is indicated.

The following tools may be required when replacing parts on this machine:


Hex key set (1.5, 2, 2.5, 3, 4, 5, and 6mm)	Source Locally
Side cutting pliers	Source Locally
Open jaw spanner set (8, 10, 12, 13, 14, 16, 17, 20 and 24mm)	Source Locally
Electronics screwdriver set, flat and Phillips	Source Locally
Metric nut spinners (5.5mm)	Source Locally
Outside circlip pliers (5mm)	Source Locally

Spares Levels

- Level 1** - Basic wear and tear items which customers could hold on site plus consumable items.
- Level 2** - Main critical items to the operation of the applicator which could be replaced by a fully trained customer.
- Level 3** - Any other items not included in the above. These would be held by Domino/ Mectec trained engineer only.

Preventive maintenance

We recommend that the following wear and tear part is used for preventative maintenance. Replacement intervals will vary according to application.

	Image	Description	Quantity per Kit	Level
		MT13247 Applicator Module Filter/ Silencer, Pack	1	1

Overview

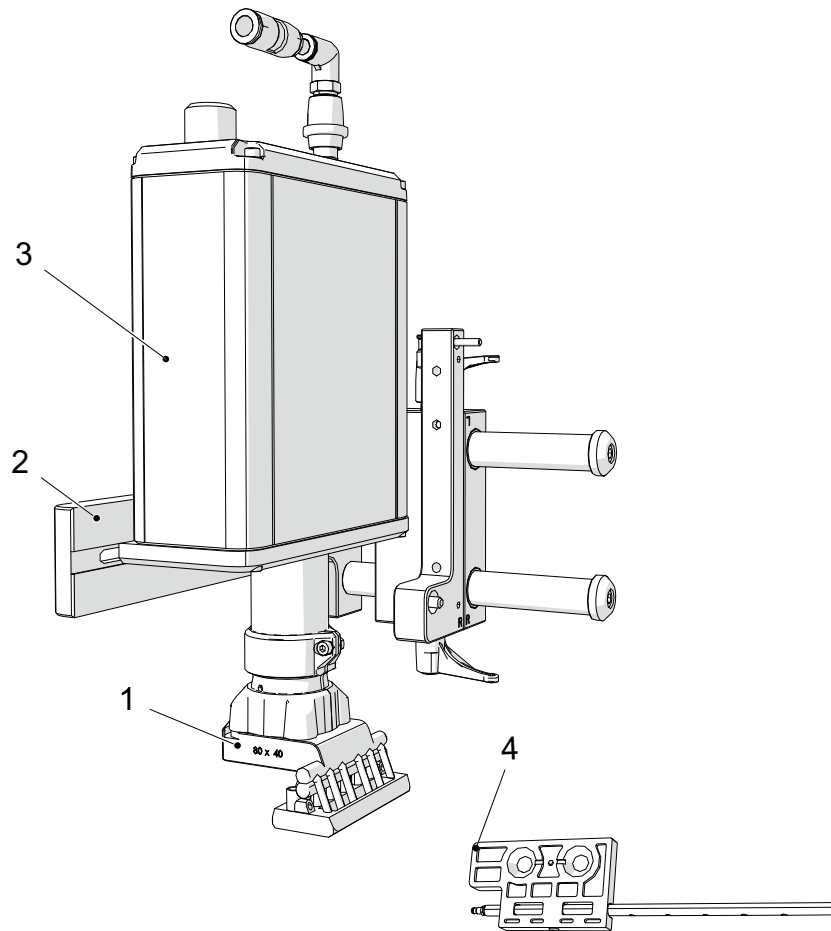


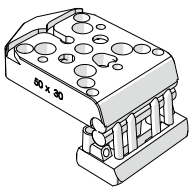
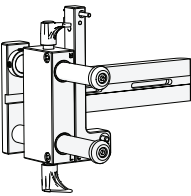
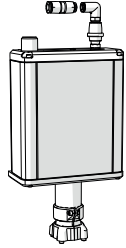
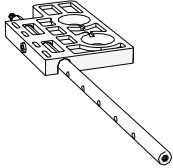
	Image	Description
1		Blow pad See “Blow pad” on page 10
2		Applicator holder See “Applicator holder” on page 11

	Image	Description
3		<p>Applicator module See “Applicator module” on page 6</p>
4		<p>Assisting blow See “Assisting blow” on page 12</p>

Applicator module

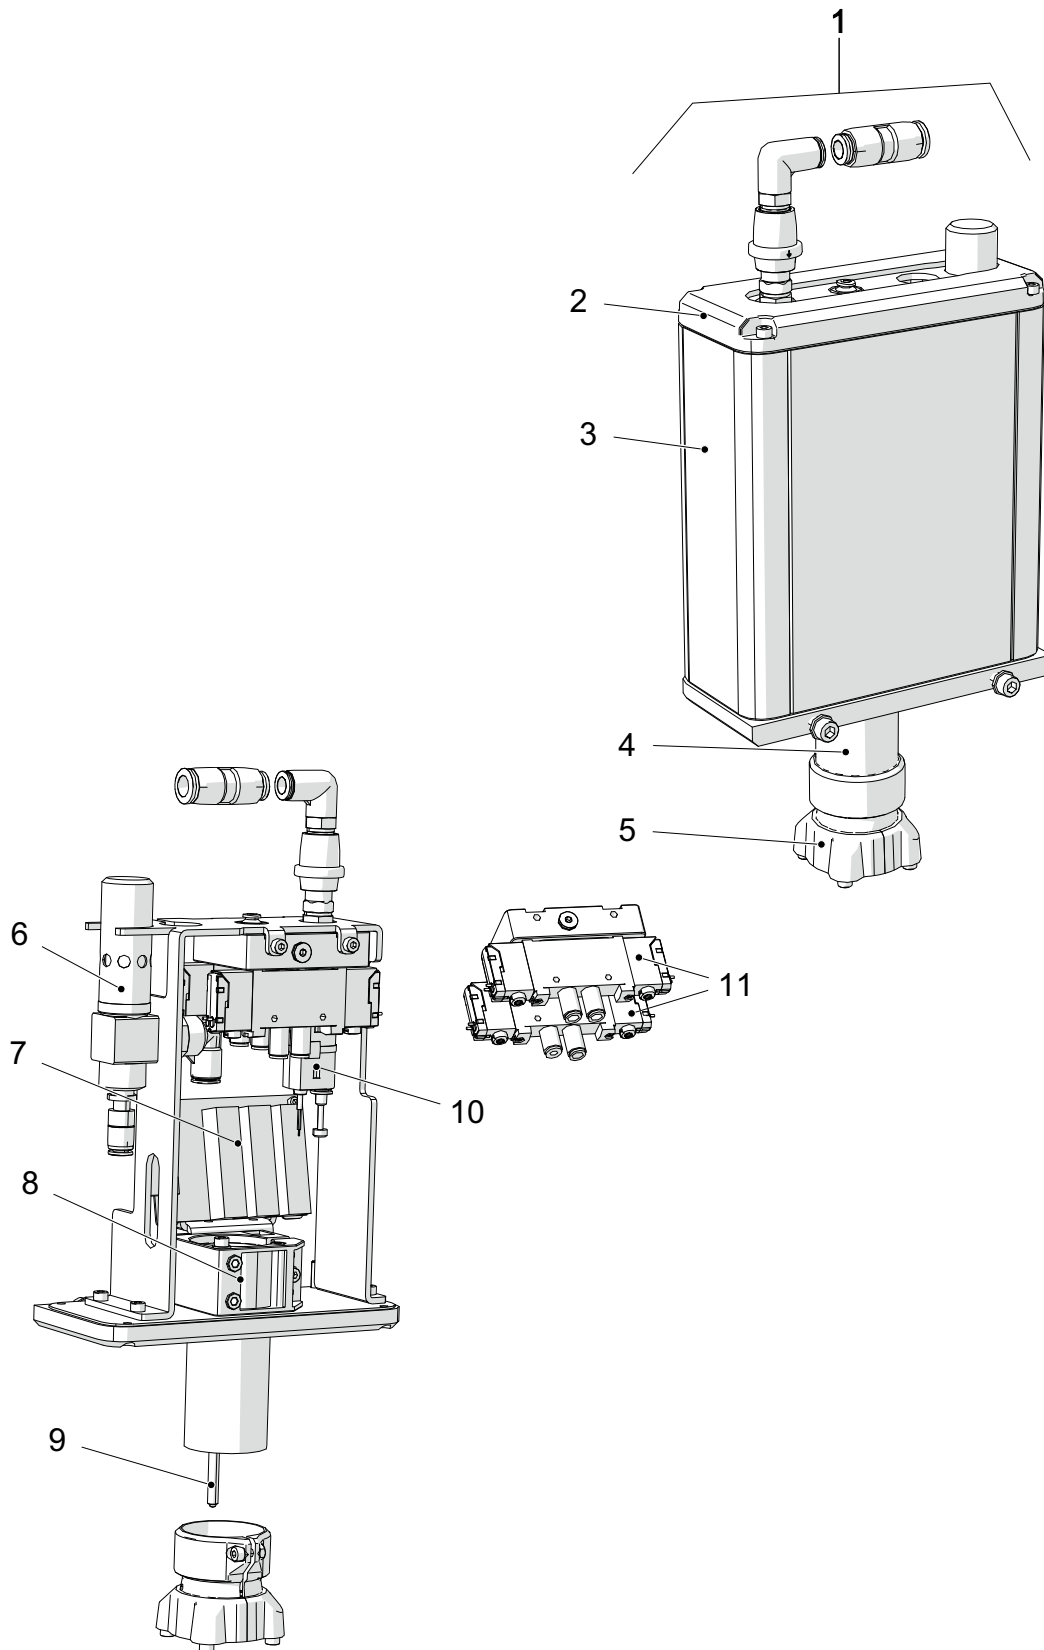


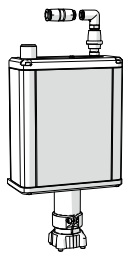
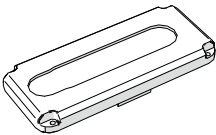
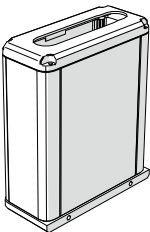

 
	Image	Description	Quantity per Kit	Level
1		EPT077959SP Applicator module (complete incl. pad screws excl. pad and logos)	1	3
2		EPT077947 Top cover B4/6	1	3
3		EPT087461 B Cover kit (excl. logos)	1	3
		EPT083313 Logo label DOMINO B	1	3
4		EPT080631 Tube stroke B4/6	1	3

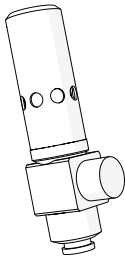

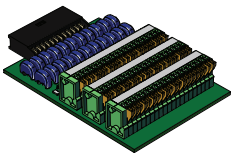
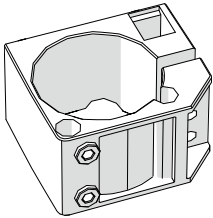
 
 
 
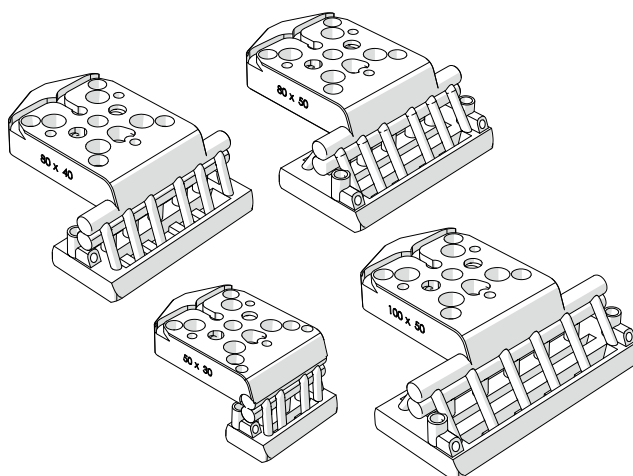
	Image	Description	Quantity per Kit	Level
5		EPT027306SP Pad adaptor with vacuum pad screws (No sensors)	1	2
6		MT11141SP Vacuum pump VL20-038C	1	3
		MT13247 Applicator Module Filter/ Silencer, Pack	1	1
7		EPT062104SP Filter board (Replacement part for MT13416SP)	1	3
8		EPT034306 Tube holder moulded Not Excluded screws	1	3
9		MT20025SP Label check sensor in pad, optic, M5X0.5X45mm	1	3

	Image	Description	Quantity per Kit	Level
10		<p>EPT022716SP Pressure sensor SDE5-DI0-O-Q6-P-K</p>	1	3
11		<p>EPT027309 Cylinder valve kit (including cable and electric connections (MT3054I))</p>	1	3
		<p>MT3054I Electric sub-baseconnection plate Valve-LI-IVLI-LP including cable</p>	1	3

Blow pad



	Description	Quantity per Kit	Level
	EPT071533SP 50x30	1	3
	EPT071534SP 80x40	1	
	EPT071536SP 80x50	1	
	EPT071535SP 100x50	1	
	Vacuum plate blow SLS V3		

Applicator Holder

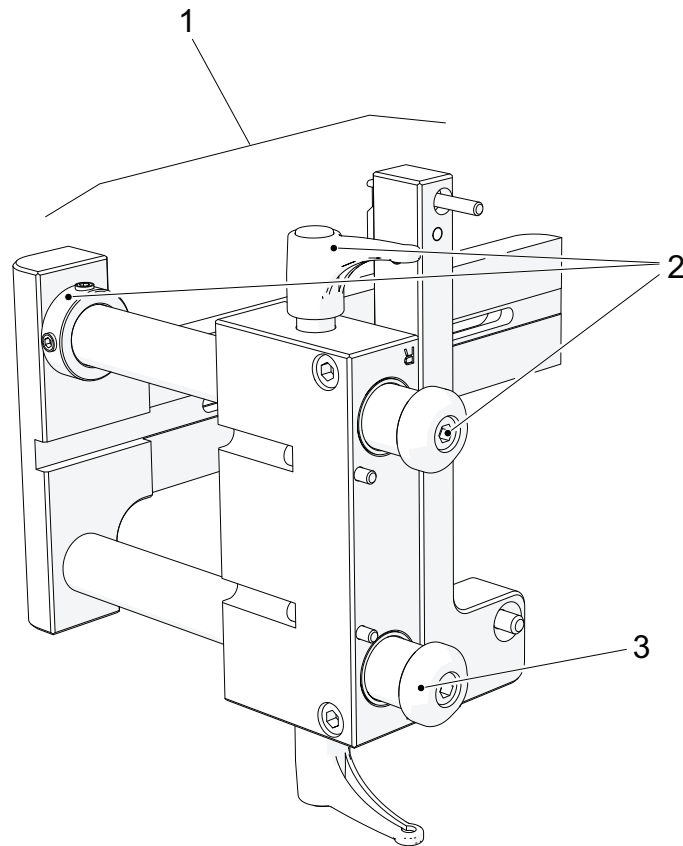
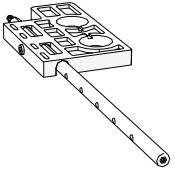


	Image	Description	Quantity per Kit	Level
1		EPT022600SP Right EPT025037SP Left Applicator holder	1	3
2		EPT027311 Fixation unit kit for applicator holder Lock lever Stop ring Shaft end cap	2 1 2	2
3		EPT019841SP Shaft end cap	1	2

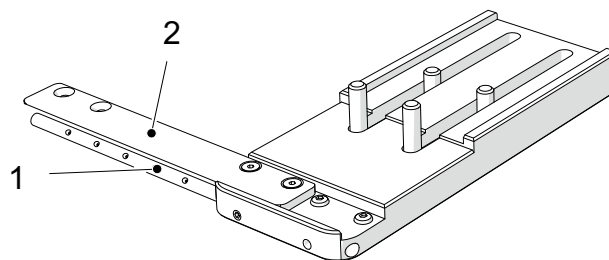
Assisting blow

	Image	Description	Quantity per Kit	Level
		EPT011675SP T50/D30/L30 ASSY	1	3
		MT12725SP D40/T60/T70/S80 Assisting blow. including 0.7m air hose	1	

Cables

 

 
	Image	Description	Quantity per Kit	Level
		EPT071425 Cable, printer to applicator, 1m	1	3

Adjustable beak kit



 
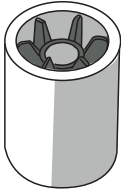


Note

An adjustable beak kit is delivered in a left hand version. To get a right hand version, you must rebuild a left hand version.

	Image	Description	Quantity per Kit	Level
		EPT078152SP T50I-L EPT078154SP T60I-L Adjustable beak kit Complete incl. assisting blow tube and 0.7m air hose.	1	3
1		EPT010642SP T70/T60/D40/L40 Assembly EPT012901SP T50/D30/L30 Assembly Assisting blow tube for extended beak only	1	3
2		MT29400 A92170 EPT011160SP T60-A92170 Dispensing beak	1	3

Air preparation kit

	Image	Description	Quantity per Kit	Level
1		<p>EPT023714SP Air supply mounting kit MS4</p> <p>Included in EPT072137SP</p>	1	3
2		<p>EPT023721SP Air kit complete MS4 with electrical 24v valve</p>	1	3
		<p>MT11713SP Silencer</p>	1	3
		<p>EPT051825 Filter cartridge MS4-LFP-E kit</p>	1	1



Domino Mx-Series Spares Catalogue

Domino Printing Sciences plc has a policy of continuous product improvement, the Company therefore reserves the right to modify the specification contained within this document without notice.

© Domino Printing Sciences plc 2023. All rights reserved.



For additional documentation, including other available languages, either scan the QR code, or go to <https://mydomino.domino-printing.com>

Domino UK Limited

Trafalgar Way
Bar Hill
Cambridge CB23 8TU
United Kingdom

Tel: +44 (0)1954 782551
Fax: +44 (0)1954 782874
Email: enquiries@domino-uk.com

Domino Amjet Inc.

1290 Lakeside Drive
Gurnee IL.60031
U.S.A.

Tel: +1 847 244 2501
Fax: +1 847 244 1421
Email: solutions@domino-na.com